 


LIKU NEKO

Automatic Pet Water Fountain

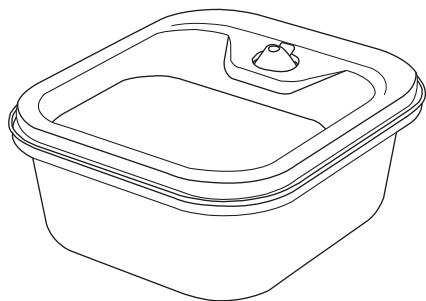

User Manual

Before using the product, please read this manual thoroughly and retain it for future reference.

Safety Precautions

! Warning

 
- Dispose of all packaging materials properly. Keep the polybags away from children and pets as these bags could cause suffocation.
- Do NOT allow children to play with, in or around the pet water fountain.
- To avoid injury, please keep close supervision when the appliance is used near children.
- Do NOT use the water fountain with pets not able to reach the water tray or with any physical disability.
- Do NOT place any foreign object in the water tank.
- Do NOT disassemble the pet fountain other than components as instructed in this User Manual.
- Do NOT use the pet fountain for anything other than its intended use.
- Only use attachments recommended or sold by the manufacturer. The use of attachments not recommended or sold by the manufacturer may cause an unsafe condition. Do NOT modify the pet fountain.
- Do NOT operate any appliance if the unit is malfunctioning or has been damaged. Do not attempt repairs on the device yourself. Contact our customer service immediately for further instructions.
- Be sure to disconnect the power supply for safety when the appliance is not in use.
- Please disconnect the power supply before maintaining and cleaning the machine.
- Always unplug the appliance when not in use; or before putting on or taking off parts and before cleaning.
- The power adapter and wire plug must not be flooded during cleaning.
- This product is for indoor use only.
- This product is not allowed to run without water.
- Never pull the electrical power cord to remove the plug from the wall outlet.
- If the plug of this device gets wet, turn off the electricity of that wall outlet. Do NOT attempt to unplug.
- Check the device after installation. Do NOT plug in if there is water on the contact points or plug.
- To avoid tripping, always position the power cord out of the way of foot traffic.
- Do not use the appliance in the bathroom.
- Change the filter every 2 weeks or when the flow rate has noticeably reduced. For two or more cats, you may need to replace the filters more regularly if it becomes blocked.

Caution

- Do NOT allow pets to chew on or swallow any parts. If you are concerned about the power cord, purchase a cord conduit (a hard-plastic protector) at any hardware store to protect the power cord.
- If an extension cord is necessary, one unit with a proper rating should be used.
- Do NOT install or store the pet water fountain where it will be exposed to weather or temperatures below 0°C / 40°F.
- Read and observe all important notices listed on the pet water fountain and in the packaging.

Contact : <https://likyneko.com/contact>

COMPONENTS

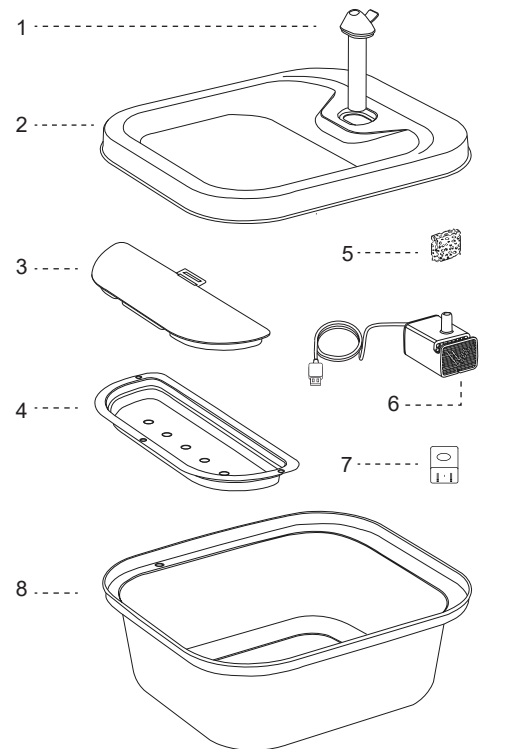

- | | | | |
|--------------|---------------|---------------|--------------|
| 1.Spout | 3.Filter | 5.Foam Filter | 7.Charger |
| 2.Water Tray | 4.Filter Tray | 6.USB cable | 8.Water Tank |

 
How To Use

Step 1

Soak the filter in a clean bowl for 5 minutes.




Notes:

- 1] The filter must be fully soaked before the fountain is turned on; otherwise, water may not flow through the filter smoothly and cause spillage.
- 2] Do not soak the filter in the water tank of the fountain in case of any surface dust.




Step 2

   Install the Type-C USB power cord. Install water pump.

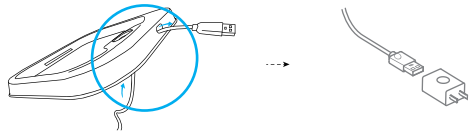


Step 3

 Add water to the tank.

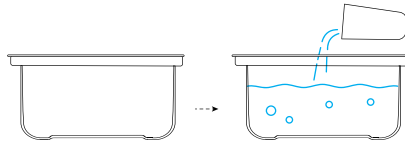


Step 4

 Place the filter on the filter tray.

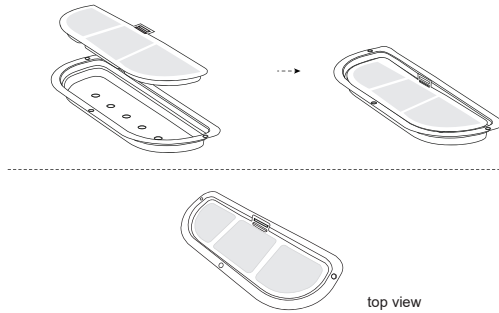


Step 5

 Install the filter tray. Press water tray down firmly with water tank.

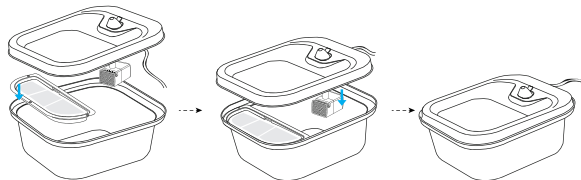

Step 6

 Connect the power adapter.

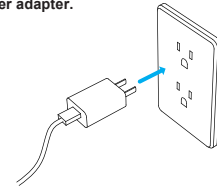

Troubleshooting

Problem	Solution
Water keeps spilling out of the water tray.	The filter may not be fully soaked. Please soak the filter in a clean bowl [not in the water tank] for 5 minutes before the first use.
The pump stops working.	1] Fill in water between MIN and MAX. The pump will fail if it runs dry. 2] Clean the pump, water tank, and drinking basin. 3] If the above solutions don't work, please contact us, Or alternatively find a replacement online through online stores such as amazon
How often should I change the filters? Where to get them?	It's recommended to replace the filters every 2 weeks. Please contact us to purchase new filters. Or alternatively find them online through online stores such as amazon
Why do I need to soak the filter before first use?	The filters absorb more water [and therefore clean more water] when they're wet and expanded. Soaking the filter removes particulate matter that may have settled on the filter.
Water output speed slows down.	For the first use [or reuse after long-time storage], the water pump needs to discharge air, it's normal if the water output speed slows down.

PUMP MAINTENANCE

Cleaning the pump is essential to the longevity of fountain. Clean the pump and fountain every 2 weeks.

1. Remove the pump cover and impeller cover in sequence.
2. Remove the impeller by the brush hook.
3. Use the brush to clean the parts with water.